




ATTENTION! When supplied singly ensure that a copy of this note is included within the package. Additional copies of this sheet can be ordered from enquiry@macouk.net

MULTI Vent tilt restrictor

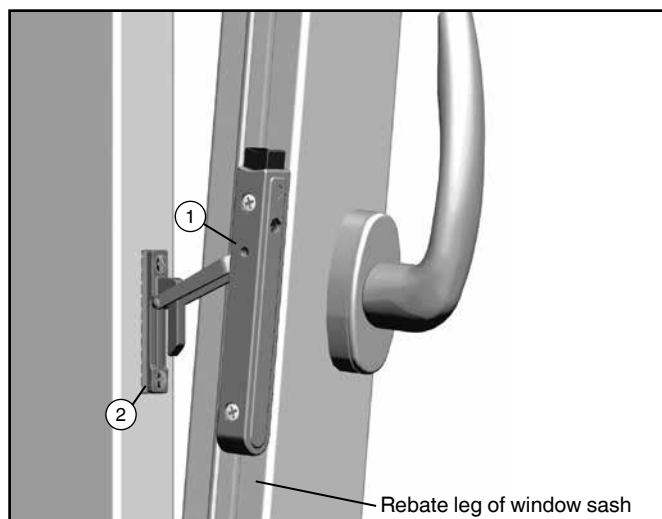


Order No.: 12361 brown
Order No.: 12360 white




This cannot be used as a child safety lock.

Installation

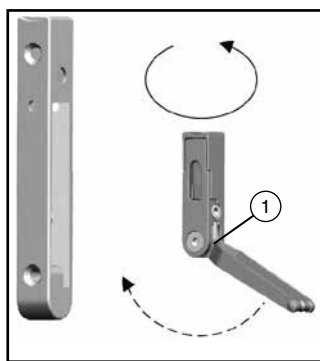

The MULTI Vent must be set to right or left so that Allen screw ① can be accessed to set the braking effect.


Timber installation:

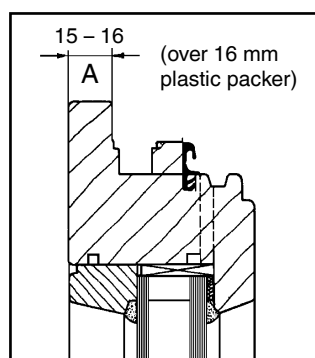

If **dimension A** (rebate height) is greater than 16 mm, the PVC packer supplied ② must be installed below the locking hook.

A second packer must be ordered over 18 mm.
(Order No. 42499)

Installation on PVC:

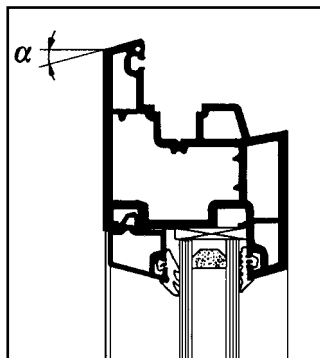

Matching PVC packers are available for pitched rebate legs (α).

5° pitch

Order No. 42502 brown


Order No. 42509 white

15° pitch

Order No. 42513 brown

Order No. 42514 white

Installation with drilling jig

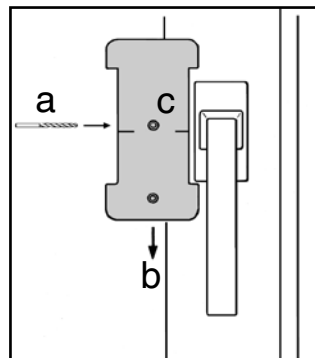

- Pre-drill the rebate leg with 3 mm drill.
- Move the jig down until the centering pins engage.
- Close the window and pre-drill the holes for the locking hooks.

Order No. 42505