


Diagram

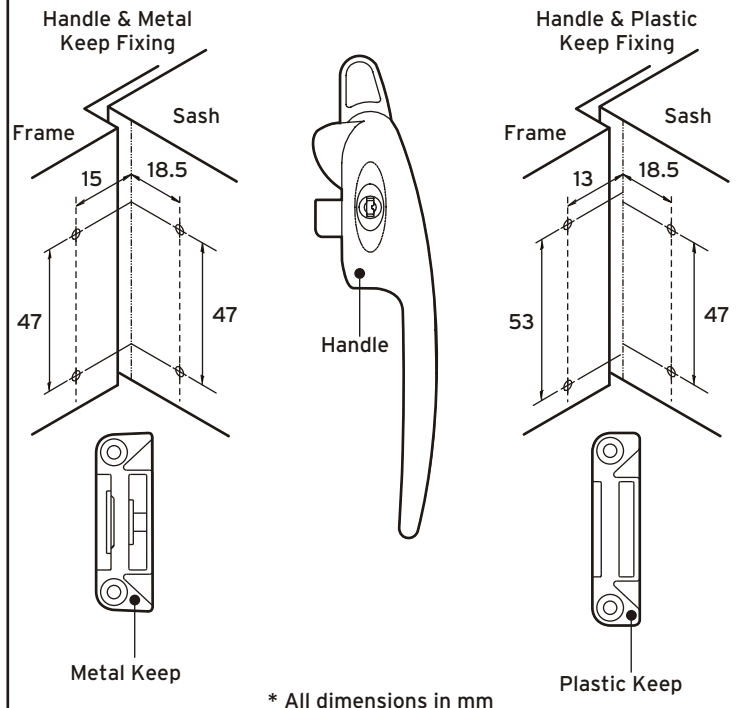

Fixing Instructions

1. Machine holes for handle and keep as per diagram 1. Ensure correct fixing dimensions are used for Metal or Plastic keep.

2. Attach handle and keep to profile/window using screws.

* Shrink wrap can remain on handle, remove excess from rear of handle for fixing*

3. Clip in handle screw cover.

4. Open and close handle (see overleaf) to check operation.

5. Attach handle key to window prior to transit.

NB It may be necessary to operate the handle a few times to bed it in and alleviate any initial stiffness in the operation

The recommended screws are No.8 Countersunk head.

- Adequate protection is advised when decorating to prevent paint of plaster etc. fouling the moving parts.
- Do not clean any part of these fittings with solvents or abrasive substances.

MARKETING DIVISION

International House, Peartree Road, Stanway, Colchester, Essex CO3 0JL

Tel: +44 (0) 1206 713800 Fax: +44 (0) 1206 543126 Web: www.titon.com